VF STRAIGHT ARM CENTER TENON

INSTALLATION INSTRUCTIONS



WARNING:

- This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
- Make sure all electrical power is turned off while installing the fixture.
- This luminaire must be adequately grounded for protection against shock hazards and to assure proper operation.
- Disconnect power before servicing.
- LEDs are ESD (Electro Static Discharge) sensitive devices that can be easily damaged if the proper ESD mitigating steps are not taken.
- LEDs are very sensitive to mechanical damage. Caution must be taken to avoid damage to the LEDs.
- ESD or mechanical damage voids all warranties.

TOOLS/FASTENERS REQUIRED:

- Torque Wrench with range of 15-125 lb-in.
- 1/8" Hex Key
 - 5/32" Hex Key

FOR USE WITH:

VF1-TMVT	VF1-TMHT	VF1-HT	VF2-TMVT	VF2-TMHT	VF2-HT	

FIG 4.3

CENTER TENON INSTALLATION

STEP 1: Feed incoming power supply wires through the slipfitter and place slipfitter over any 2" (2-3/8 O.D.) tenon.

NOTE: Optional slipfitters to fit over a 2-7/8"O.D. or 3" O.D. pole tops available.

- STEP 2: Level top of slipfitter and tighten the (4) 3/8-16 set screws. Torque to 115-125 lb.-in.
 - NOTE: To prevent slipfitter rotation, remove one set screw, drill a small recessed screw point into the tenon or pole, being careful to avoid damaging the threads in the slipfitter.
- STEP 3: Replace the set screw (provided) ensuring proper torque.
- STEP 4: Refer to VF INSTRUCTIONS for fixture mounting.
- FIG 4.1 TMHT-SQ-CT Shown



FIG 4.2 TMHT-RD-CT Shown





4-1/8

VF-TMHT-SQ-CT Shown

