

# MUD FLANGE ASSEMBLY

## LED DOWNLIGHT INSTALLATION INSTRUCTIONS



### WARNING:

- This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
- Make sure all electrical power is turned off while installing the fixture.
- This luminaire must be adequately grounded for protection against shock hazards and to assure proper operation.
- Disconnect power before servicing.
- LEDs are ESD (Electro Static Discharge) sensitive devices that can be easily damaged if the proper ESD mitigating steps are not taken.
- LEDs are very sensitive to mechanical damage. Caution must be taken to avoid damage to the LEDs.
- ESD or mechanical damage voids all warranties.
- Suitable for dry and damp locations.

### FOR USE WITH:


- |       |       |       |       |       |       |       |
|-------|-------|-------|-------|-------|-------|-------|
| ▪ 2AR | ▪ 2DR | ▪ 4AR | ▪ 4DS | ▪ 4PS | ▪ 6DR | ▪ 6PR |
| ▪ 2AS | ▪ 2DS | ▪ 4DR | ▪ 4PR | ▪ 6AR | ▪ 6DS | ▪ 6PS |

**STEP 1:** After ceiling installation, cut appropriate hole corresponding to center of pan aperture. See FIG 1.1

2" Round:  $\phi 4"$                       4" Square: 5-1/2"  
 2" Square: 3-1/2"                  6" Round:  $\phi 7"$   
 4" Round:  $\phi 5-1/2"$               6" Square: 7"


**NOTE:** Note: LED power cable must be accessible through pan aperture after ceiling installation for future LED module installation.

FIG 1.1

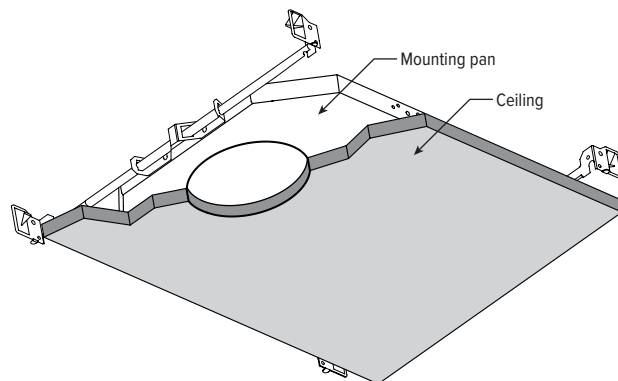


**STEP 2:** Insert mud flange into ceiling cutout. Affix mud flange to ceiling surface using drywall tape (a non-moisture absorbing tape is recommended) or drywall adhesive. See FIG 2.1

FIG 2.1

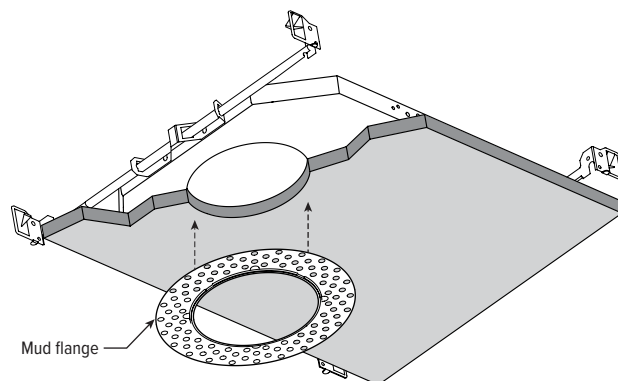


**STEP 3:** Insert masking plug into mud flange aperture. See FIG 3.1  
 Tape and mud flange to ceiling material. Feather in plaster as needed to visually obscure the mud ring.

FIG 3.1

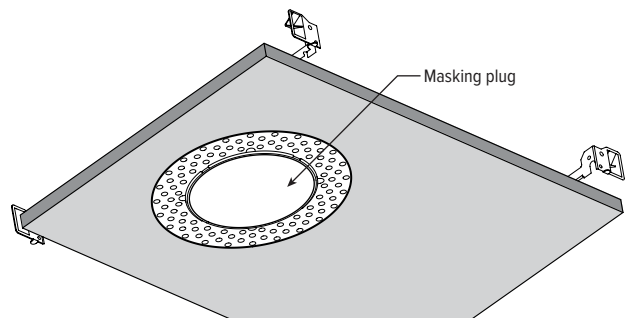

**STEP 4:** Paint and/or finish ceiling per specification. See FIG 4.1

FIG 4.1

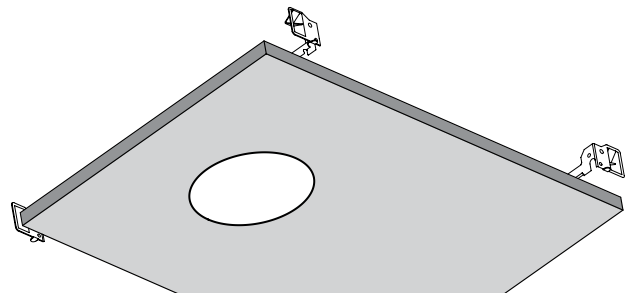

**STEP 5:** When ceiling treatment is fully dry, carefully remove and discard masking plug. See FIG 5.1

FIG 5.1

